



ESSENTIAL SERIES

**10 000 mAh**  
**WIRELESS POWER BANK**



**INSTRUCTION MANUAL**

*Please read these instructions carefully and retain for future reference.*



**SAN-1039-BK**

## HIGHLIGHTS

- 2 x Charging Ports
- Type-C and Micro USB Charging Ports
- 10 000 mAh Lithium Polymer
- LCD Display

## TECHNICAL SPECIFICATIONS

 
Battery Type:	Lithium Polymer
Battery Capacity:	10 000 mAh
Input 1:	5 V DC, 2 A Micro USB
Input 2:	5 V DC, 2 A Type-C
Output 1:	5 V DC, 2.1 A USB
Output 2:	5 V DC, 1 A USB
Wireless Output 3:	5 V DC, 1A, 5 W
Weight:	350 g
Dimensions:	152 x 75.5 x 18.5 mm 5.98 " x 2.97 " x 0.73 "

## PACKAGE CONTENTS

- Sansui Essential Series 10 000 mAh Wireless Power Bank
- Dual-Tip Type-C and Micro USB Charging Cable
- Instruction Manual


## IDENTIFYING PARTS

### Dual-Tip Charging Cable

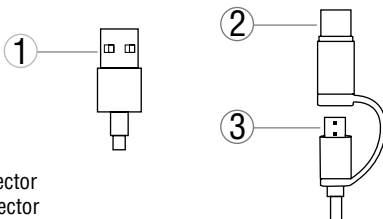

1. USB-A Connector
2. Type-C Connector
3. Micro USB Connector

## IDENTIFYING PARTS

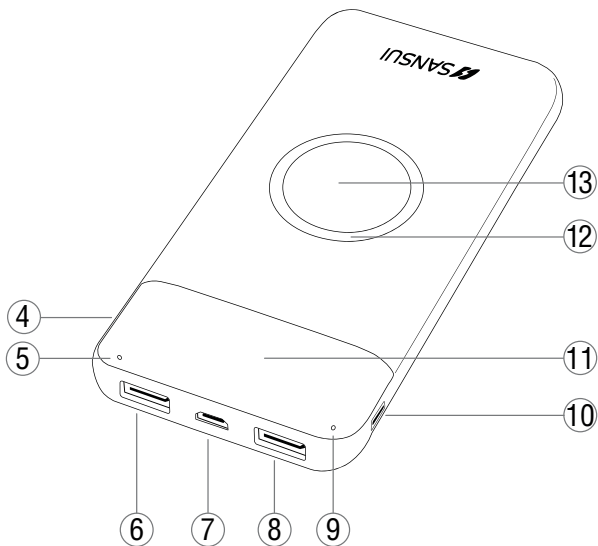 

4. Power / Battery Level Indicator Light Button
5. Charge Indicator (Green Indicator Light)
6. 5 V DC, 2.1 A USB Output
7. 5 V DC, 2 A Micro USB Input
8. 5 V DC, 1 A USB Output
9. Charge Notification (Red Indicator Light)
10. 5 V DC, 2 A Type-C Input
11. LCD LED Display
12. Non-Slip Mat
13. 5 V DC, 1A, 5 W, Wireless Qi Charging Pad

## INSTRUCTIONS FOR USE

### **Switching On The Power Bank:**

Press the Power / Battery Level Indicator Light Button to turn on the Power Bank. The LED Screen will turn on and indicate the Power Bank battery charge percentage.

### **Charging The Power Bank:**

Charge the power bank fully before use. Connect the Micro USB end of the Charging Cable to the Micro USB Input on the Sansui Essentials Power Bank, and the other end to a standard USB Wall Charger.

The Power Banks LED Power Display will light up and flash until the unit is fully charged.

### **Charging Your Devices:**

Charging Via USB:

1. Connect the device you wish to charge to the Sansui Essentials Power Bank.

**Note: The Power Bank will automatically detect the required load for charging.**

2. Press the Power / Battery Level Indicator Light Button if the device does not automatically power on the Power Bank when your device is connected.
3. Allow your device to charge.

**Note: The LED Battery Indicator will display the remaining Power Bank battery level.**

### **Wireless Charging:**

1. Place the device you wish to charge onto the Non-Slip Mat.
2. Press the Power / Battery Level Indicator Light Button.
3. Allow your device to charge.

**Note: The LED Battery Indicator will display the remaining Power Bank battery level.**

Turn off the Power Bank when not in use.

To preserve the battery lifespan, it is recommended to keep the Power Bank at 50% charge and charge it every 3 months.


## SAFETY PRECAUTIONS

- The product should only be used with the parts provided by the manufacturer.
- The Sansui Essentials Power Bank is intended for personal use only. Commercial use invalidates the warranty and the supplier cannot be held responsible for injury or damage caused when using the device for any other purpose than that which it was intended for.
- This Sansui Essentials Power Bank is not intended for use by young children, or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the device by a person responsible for their safety. Extreme caution must be exercised.
- Children should be supervised to ensure that they do not play with the

## CLEANING AND CARING INSTRUCTIONS

- **Before Cleaning:** Ensure that your Sansui Essential Power Bank is turned off and disconnected from a USB Cable before cleaning or maintaining it.
- **Cleaning:** Wipe down the surface of your Sansui Essential Power Bank using a soft, slightly damp cloth.
- Do not use any harsh or abrasive cleaning chemicals or materials on your Sansui Essential Power Bank as doing so may damage or scratch the surface finish.
- Do not expose your Sansui Essential Power Bank to direct sunlight or high temperatures for extended periods of time.
- Do not store in temperatures over 140 °F (60 °C).

## ENVIRONMENTALLY FRIENDLY DISPOSAL

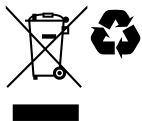

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well being.

## DISCLAIMER

All product and company names are trademarks™ or registered® trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by trademark or registration holders.

## WARRANTY

This Sansui Essential Power Bank includes a standard 12-month limited warranty against manufacturing defects and faults. Should your product be unboxed with any faulty parts, poor finishing or visible damage, or failure to perform due to a manufacturing defect or poor workmanship, please return it with your proof of purchase (till slip or invoice) to the store of purchase for an exchange or repair depending on the store's returns policy.

This warranty commences from the date of purchase.

Kindly retain your proof of purchase as well as the packaging for your warranty period.

**NOTE:**

The Warranty does not apply to a product that:

- a.) Has failed due to excessive wear and tear beyond what is considered to be reasonable.
- b.) Has been misused or neglected.
- c.) Has been damaged accidentally or by acts of God including fire and flooding.
- d.) Has been used or operated contrary to operating or maintenance instructions outlined in this manual.

The Store of Purchase / Seller cannot accept any returned products that have not been returned in accordance with this warranty or which does not follow their own Returns Policy. Please refer to the Store of Purchase / Sellers Returns Policy for details.

Should you require any further assistance or have any questions on your warranty, please contact the store of purchase.

